

- 1. Remove the original light from the machine
- 2. Using the spacer provided, install the new light onto the OE bracket (see photo below)
- 3. Position light to desired location and secure hardware



