



HM4291311 [Bridgelux LED Flood Beam Light, 2880 Lumens]

Instruction Guide

When replacing original Equipment Light:

1. Remove original light from machine, disconnect wiring harness
2. Install Hy-Cap light and connect wiring harness
3. Adjust light to desired position and secure

When installing new Light:

1. Remove plastic cover from arm bracket of machine
2. Determine which of the connectors inside arm is the proper one for operation of the mid body light (Use the indicator light panel inside of cab to ensure that you located correct wire connector)
3. Install electrical connectors where needed
4. Install light onto arm using hardware provided
5. Adjust light to desired position and secure
6. Replace plastic arm cover

