

HR10112 [CREE LED Flood Beam Cab Light, 3000 Lumens]

Instruction Guide

This lamp is designed to accommodate left & right, front & rear applications

- 1. Remove the original light from the machine
- 2. Disconnect electrical connector from light
- 3. Place new light into OE bracket on machine and replace bolt, washer & nut
- 4. Attach electrical connector
- 5. Adjust beam to desired position and secure hardware



