



## HR269110 [LED Light, 4500 Lumens]

### Instruction Guide

This light is designed to accommodate left or right-side applications

1. Remove the original light from machine and disconnect the electrical plug
2. Attach new electrical connector and install new light
3. Adjust beam to desired direction and secure hardware

