




HA87415023 KIT [CREE LED Fender Rear Warning Light Kit]

Instruction Guide

1. Remove 3 bolts on underside of fender that hold fender skirt in place and pull skirt away from fender
2. Remove 3 screws on the underside of fender that hold light in place
3. Remove light and disconnect wiring or remove bulbs from housing
4. Attach side light wiring by attaching spades with OE connectors
5. Due to OE bulbs being wired direct without connectors, you will need to install the harness included with this kit. Please be aware of which wire is tail, which is turn, and which is for brakes

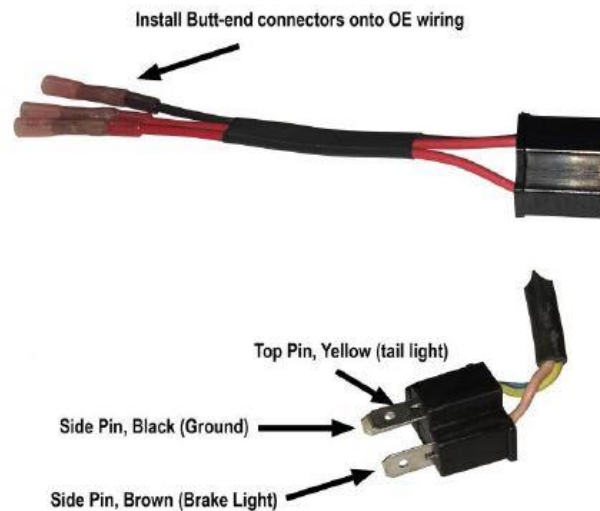

6. Once harness is installed onto OE wiring, attach harness to connector on new light
7. Position light into place in the fender, and secure using screws provided with light
8. Once light is installed, replace fender skirt bolts

